


JAPANDI

T2S

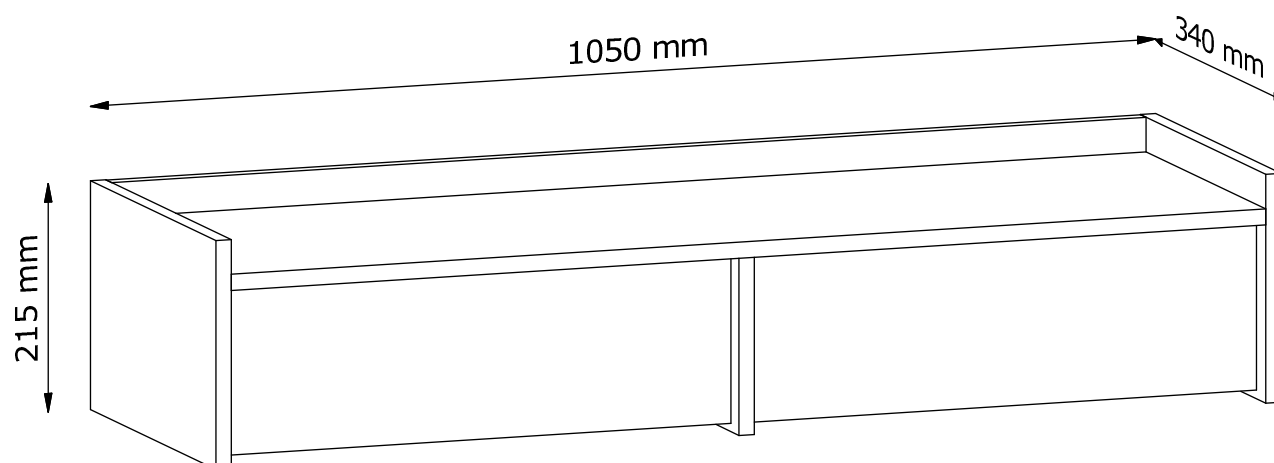

PL: INSTRUKCJA MONTAŻU

EN: ASSEMBLY MANUAL

CZ: PŘÍRUČKA PRO MONTÁŽ

SK: PRÍRUČKA PRE MONTÁŽ

DE: MONTAGEANLEITUNG

SR: UPUTSTVO ZA INSTALACIJU

NL: MONTAGE-INSTRUCTIES







PT: MONTAGEM DE INSTRUÇÃO







HR: SASTAVLJANJE UPUTE





















Adresses sur quefairedemesdechets.fr

10.12.2025 - Rev. 1

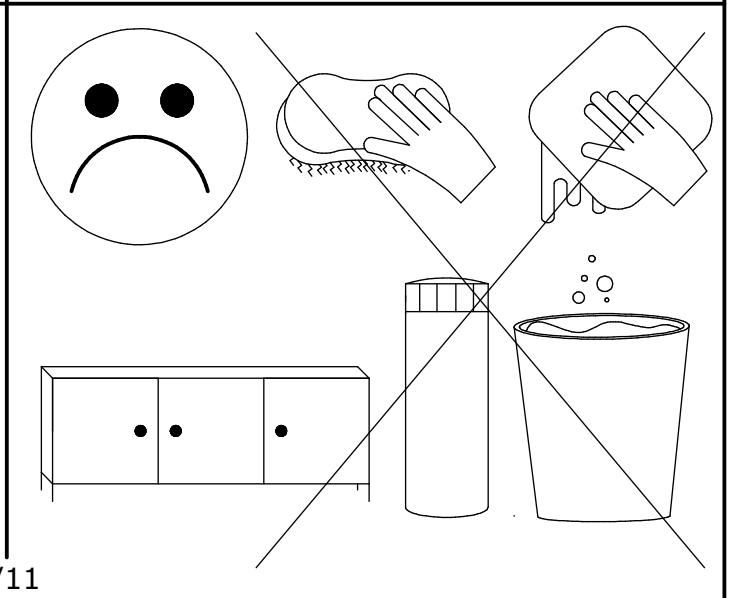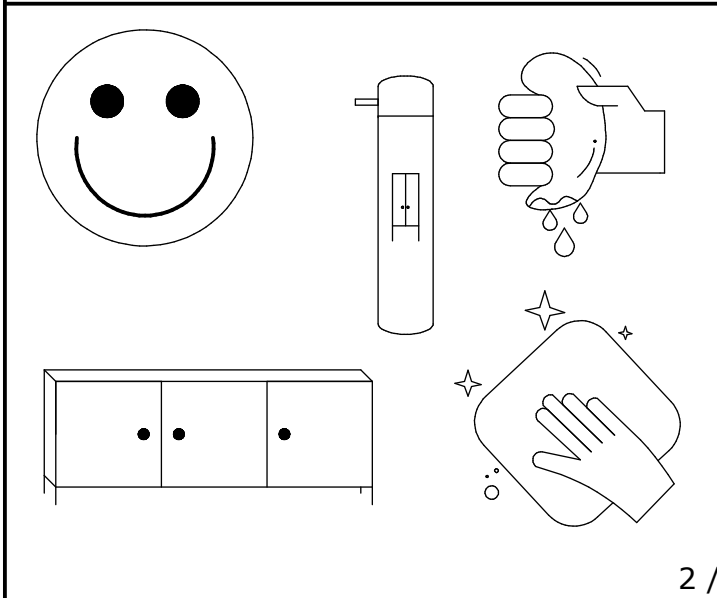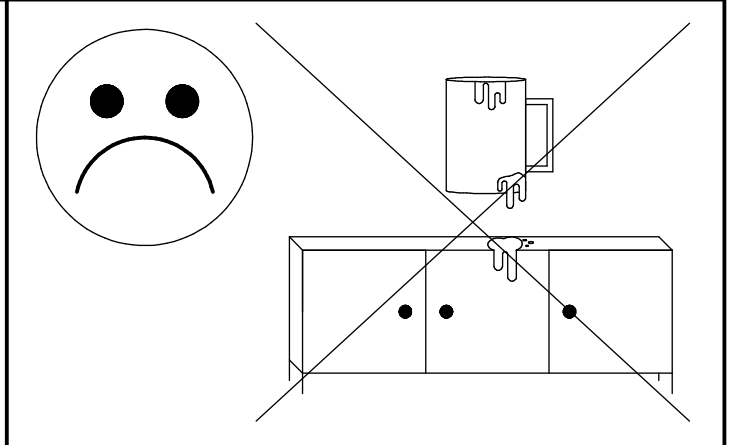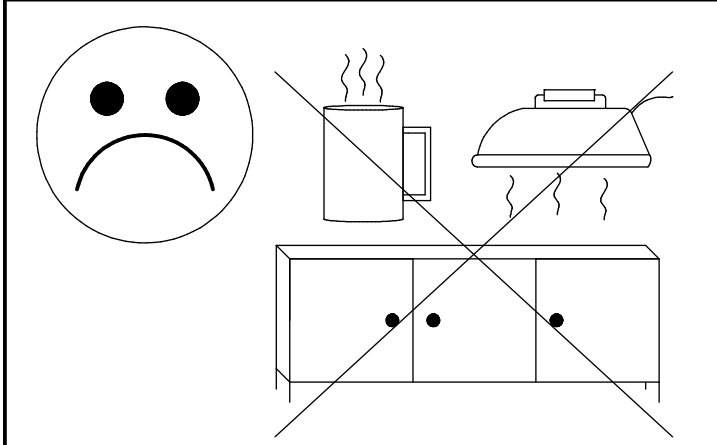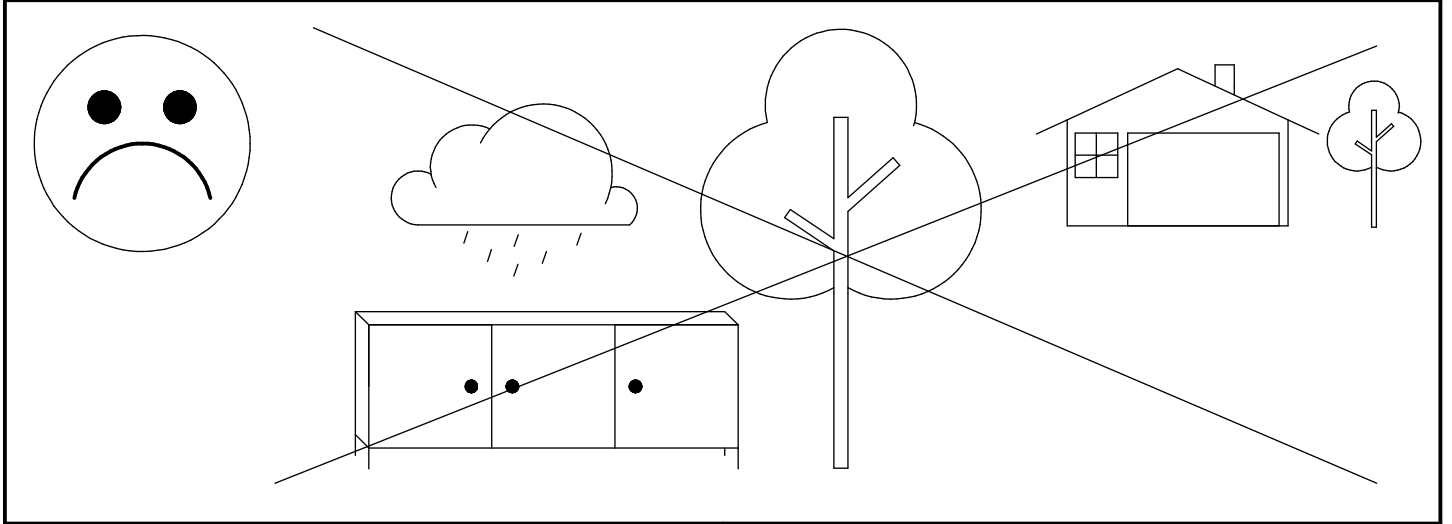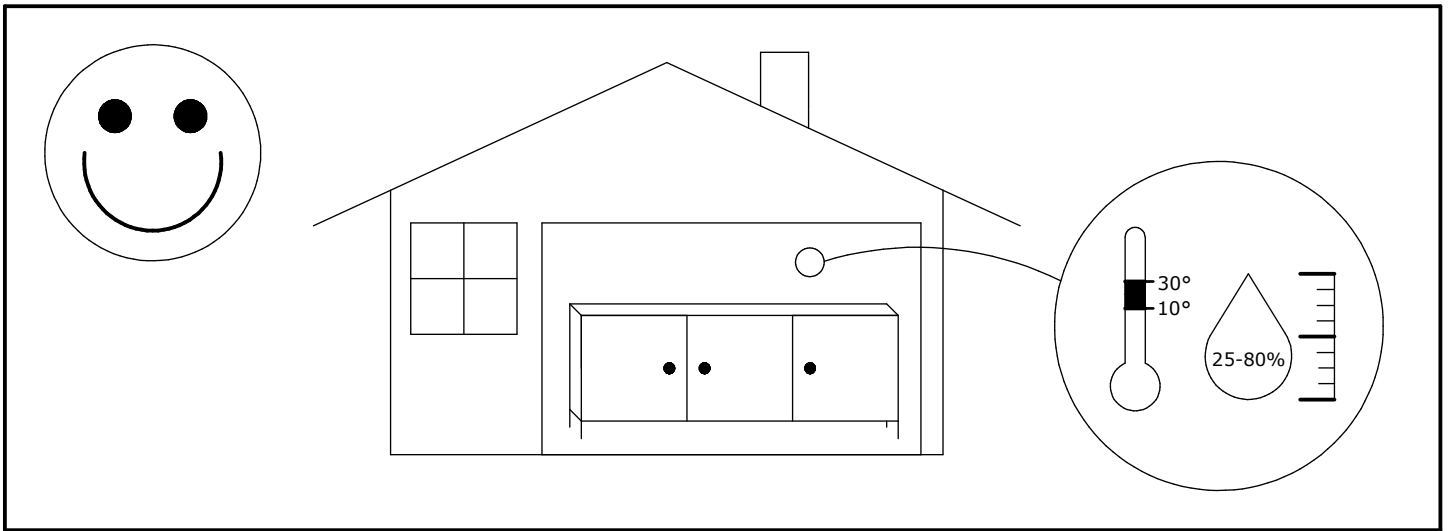


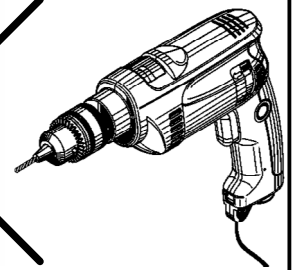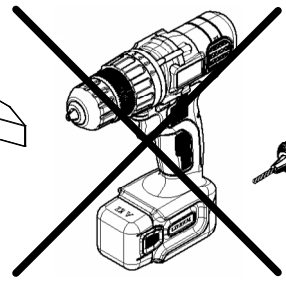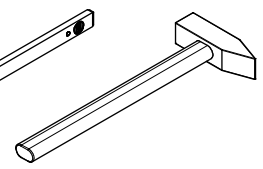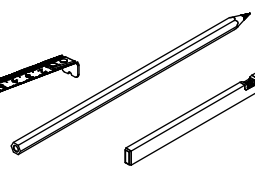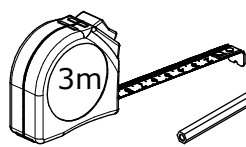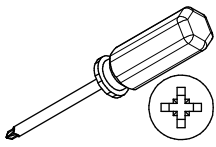
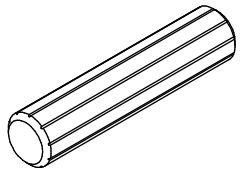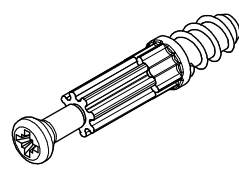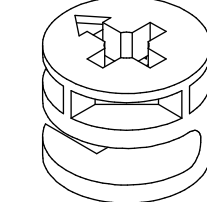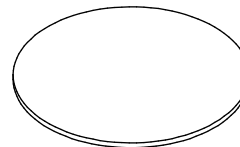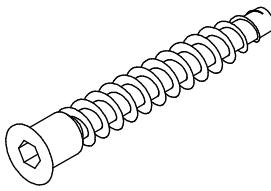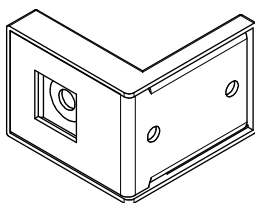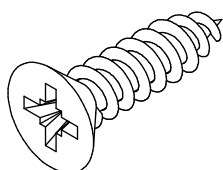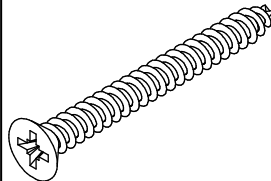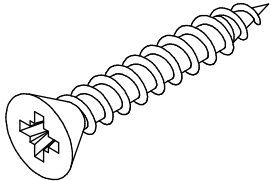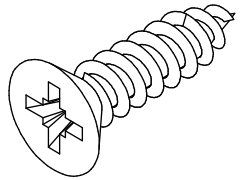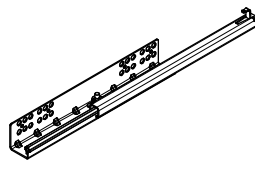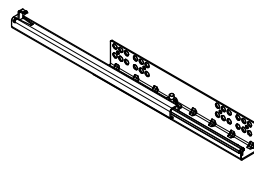
<p>A1 x16</p>  <p>Ø8x35mm</p>	<p>B1 x14</p>  <p>Ø5x38mm</p>	<p>C1 x14</p>  <p>Ø15x12mm</p>	<p>J39/40 x4</p>  <p>Ø20mm</p>	<p>K1 x4</p>  <p>Ø6,4x50mm</p>
<p>N2 x1</p>  <p>4mm HEX</p>	<p>O4 x3</p>  <p>52x49x39mm</p>	<p>W2 x16</p>  <p>Ø3,5x16mm</p>	<p>W6 x8</p>  <p>Ø4x40mm</p>	<p>W11 x4</p>  <p>Ø3x20mm</p>
<p>W19 x6</p>  <p>Ø4x16mm</p>	<p>250L x2</p>  <p>250mm</p>	<p>250R x2</p>  <p>250mm</p>		

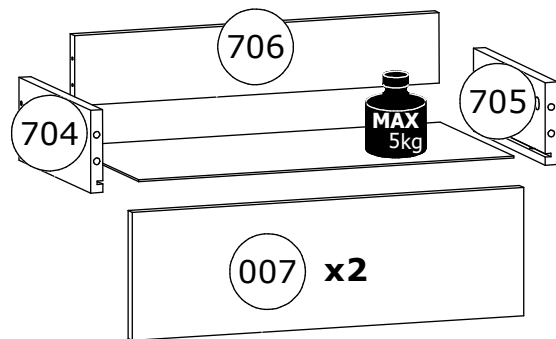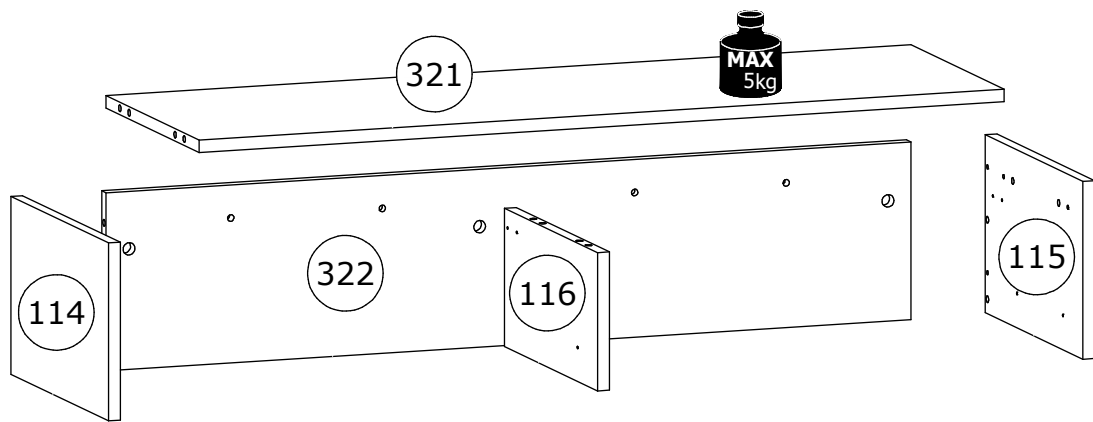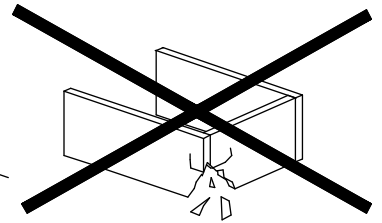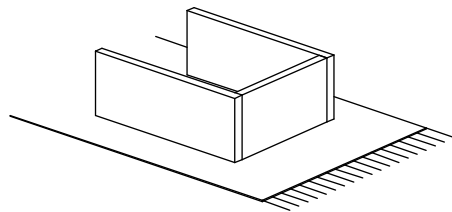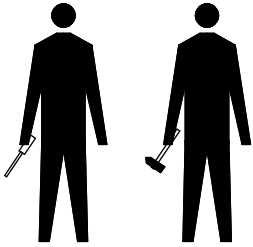


No	L[mm]	W[mm]	H[mm]	PCS	BOX
007	496	155	15	2	1/1
114	215	340	15	1	1/1
115	215	340	15	1	1/1
116	167	324	15	1	1/1
321	1020	324	15	1	1/1
322	215	1020	15	1	1/1
509	475	256	2,5	2	1/1
704	250	100	15	2	1/1
705	250	100	15	2	1/1
706	462	85	15	2	1/1



1/1


1

B1 x8




Ø5x38mm

O4 x2




52x49x39mm

W2 x4




Ø3,5x16mm

W19 x4




Ø4x16mm

250L x1





250mm

250R x1



250mm



W2

250R


B1

O4


W19

B1

115

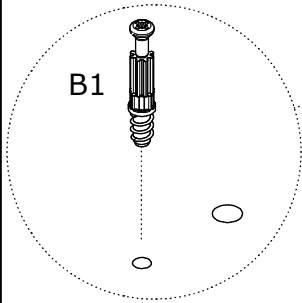

B1

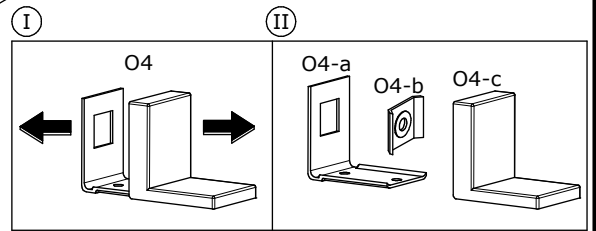

I


O4

II

O4-a

O4-b

O4-c



W2

W2

250L

B1

O4

B1


B1

W19













W19

114

B1

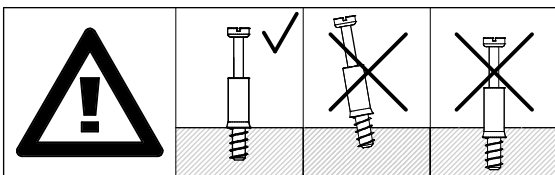


2

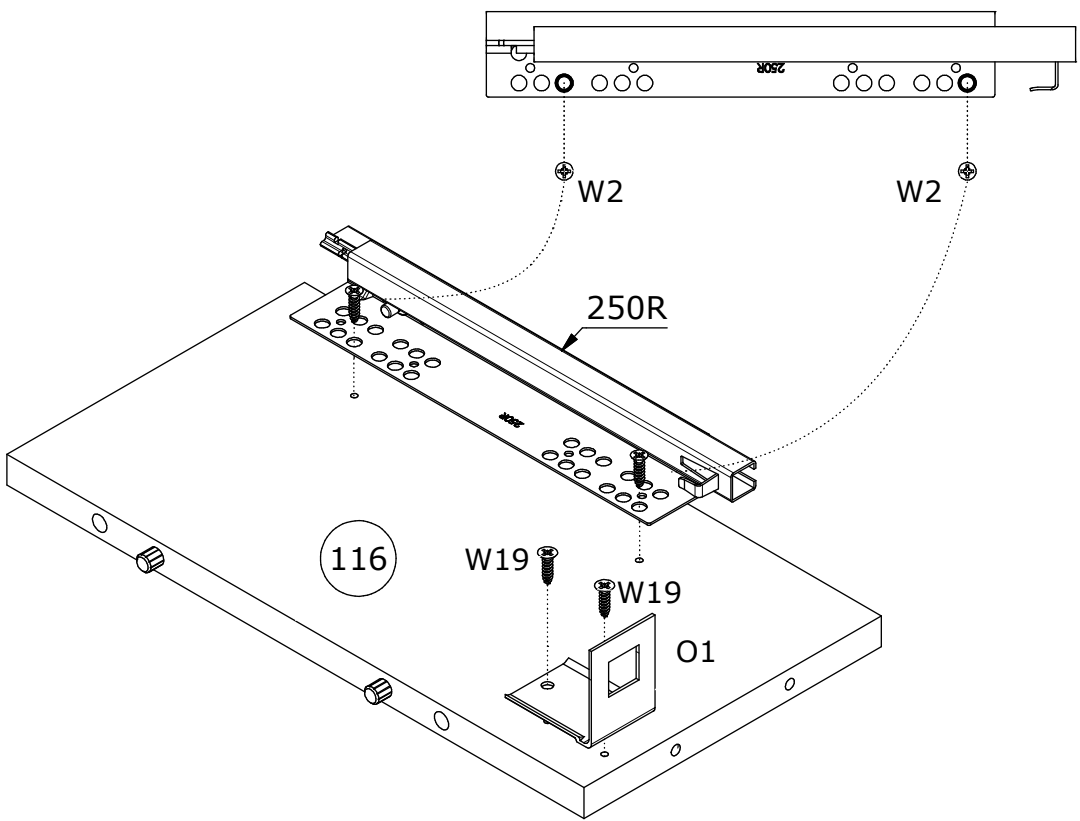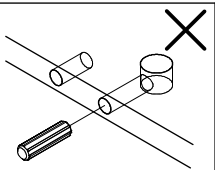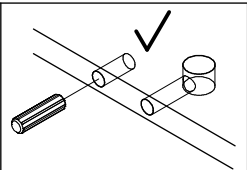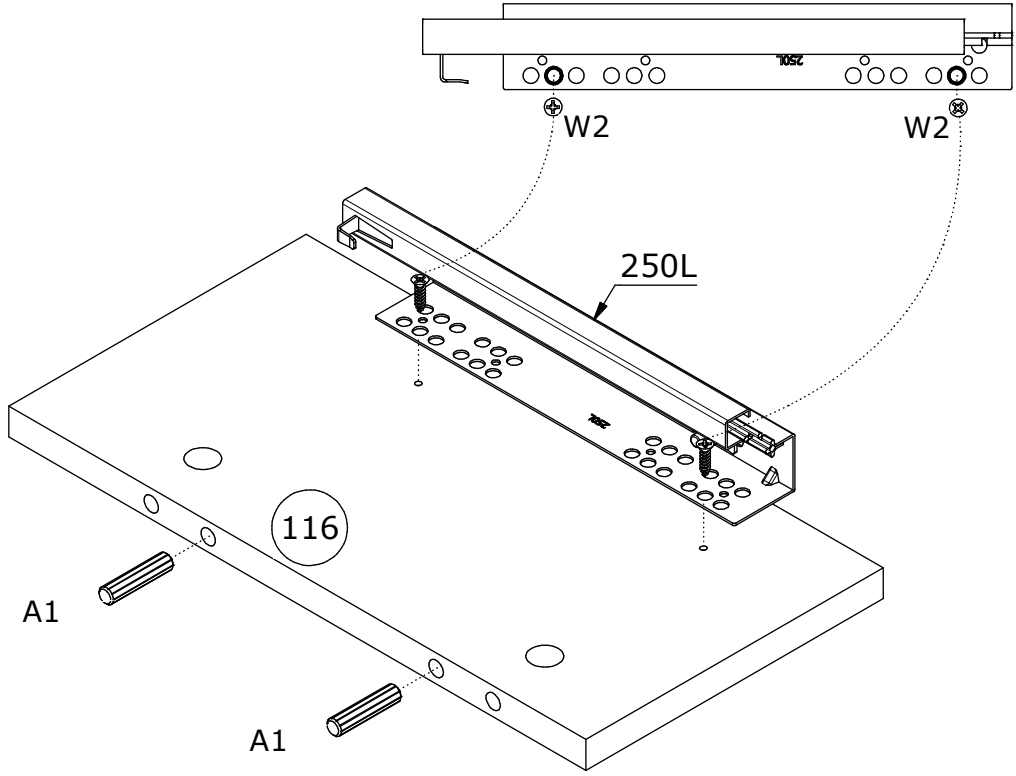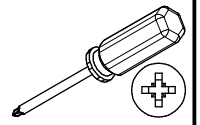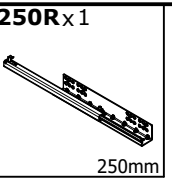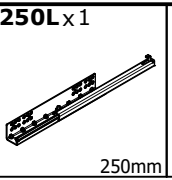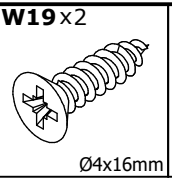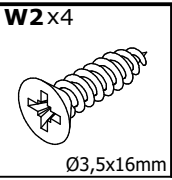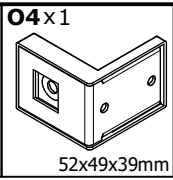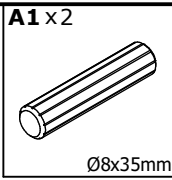


3

A1 x 10







Ø8x35mm

B1 x 2




Ø5x38mm

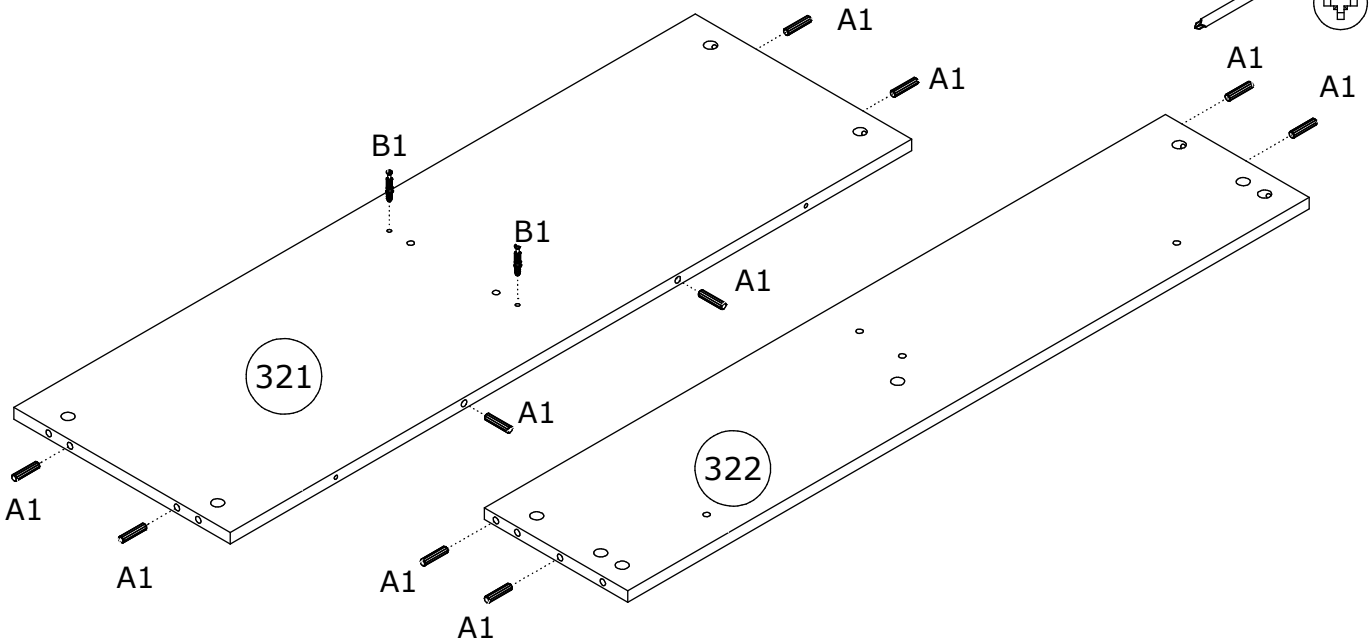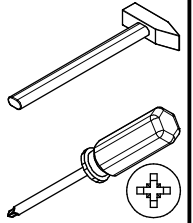
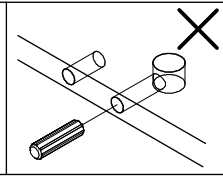
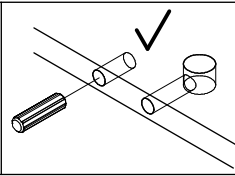


4






C1 x 14








Ø15x12mm

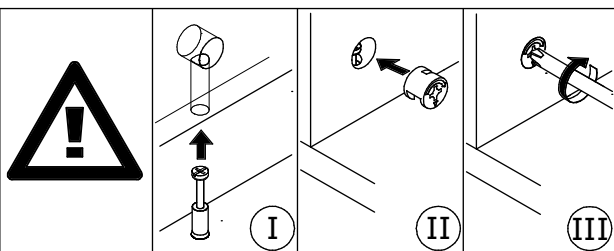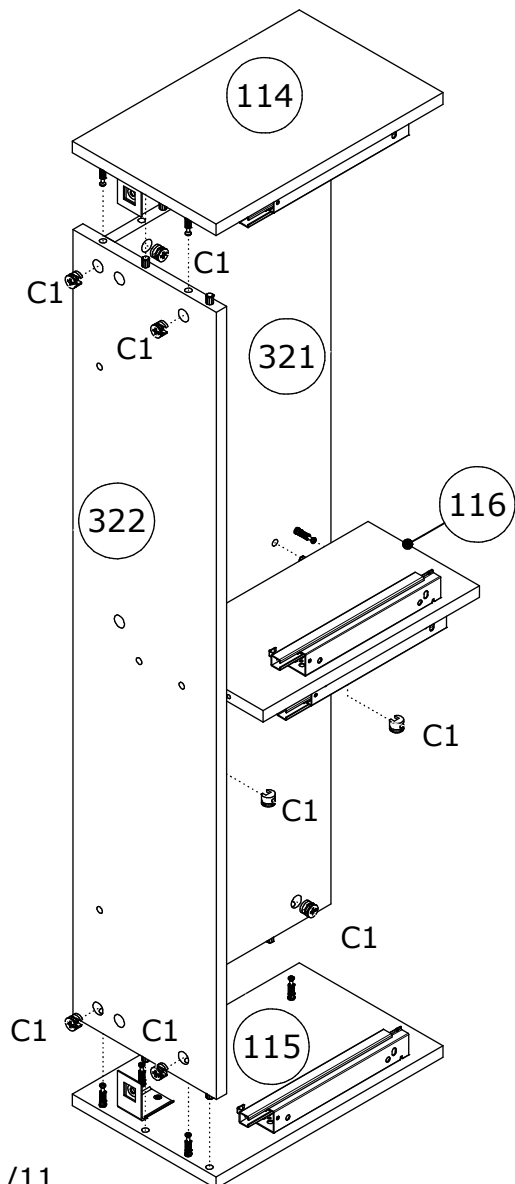





5

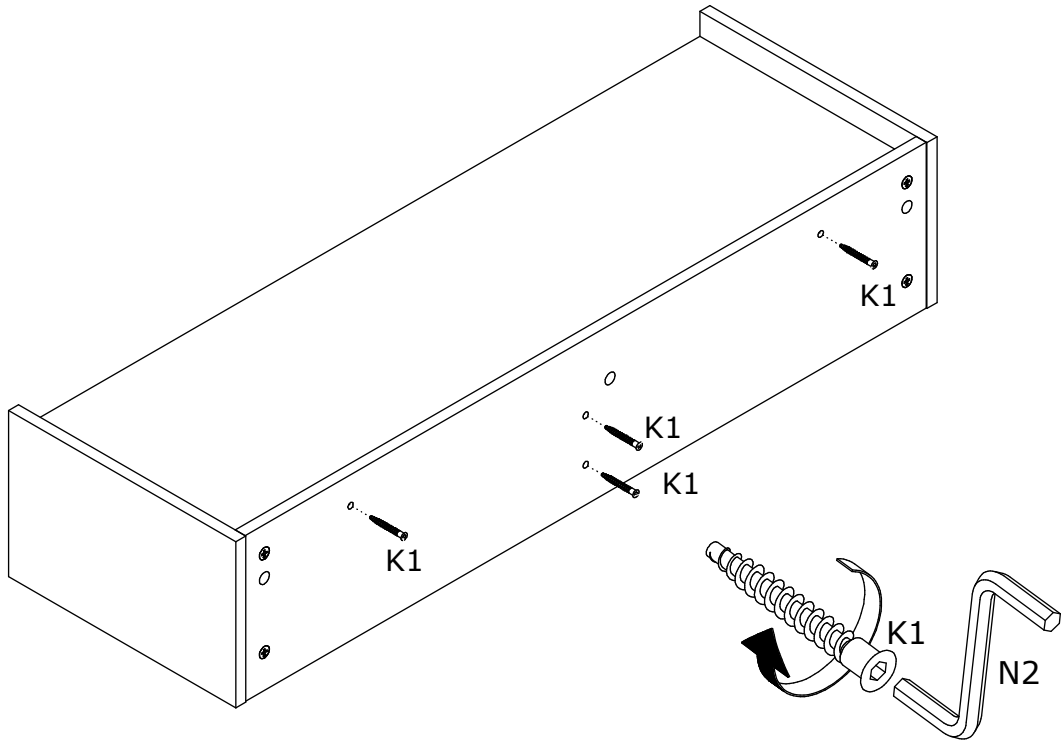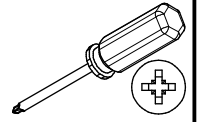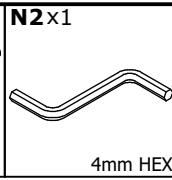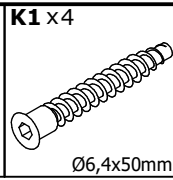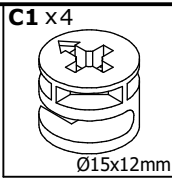




6

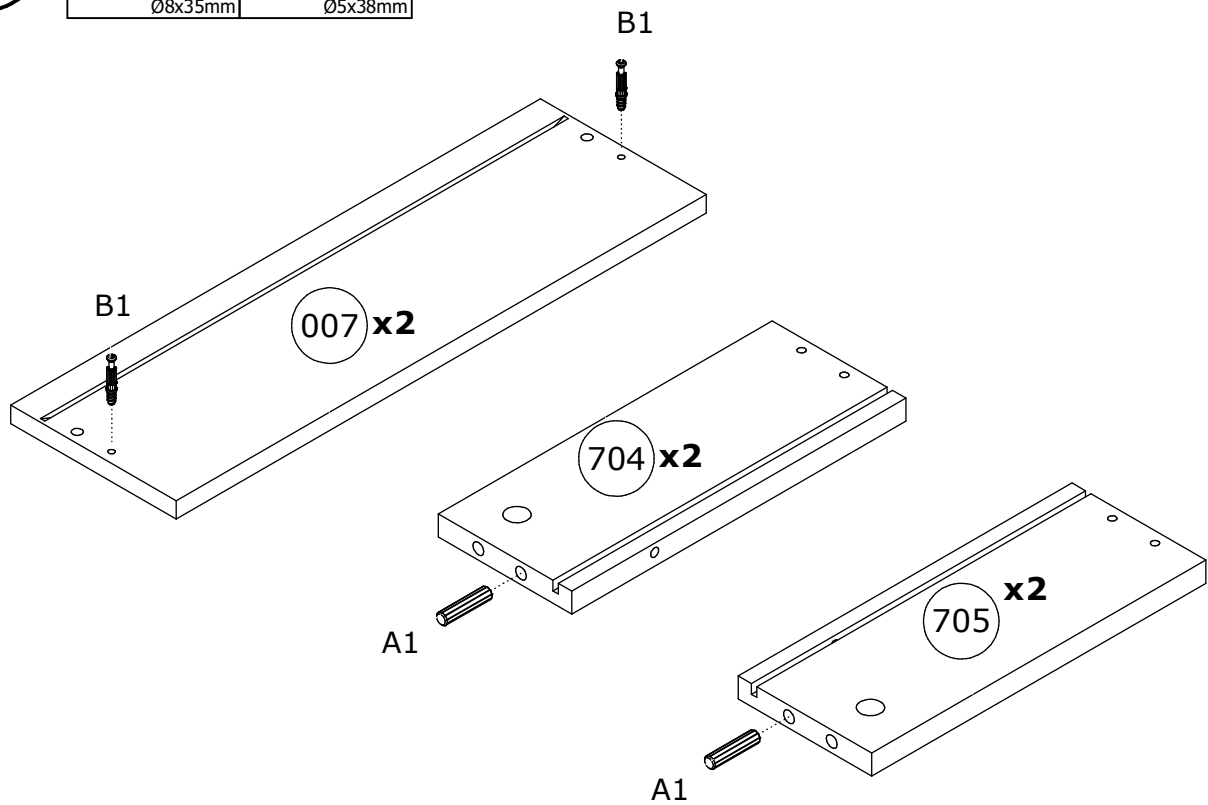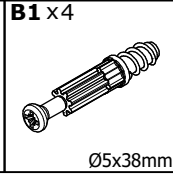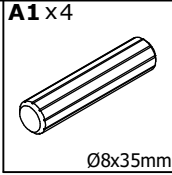



7

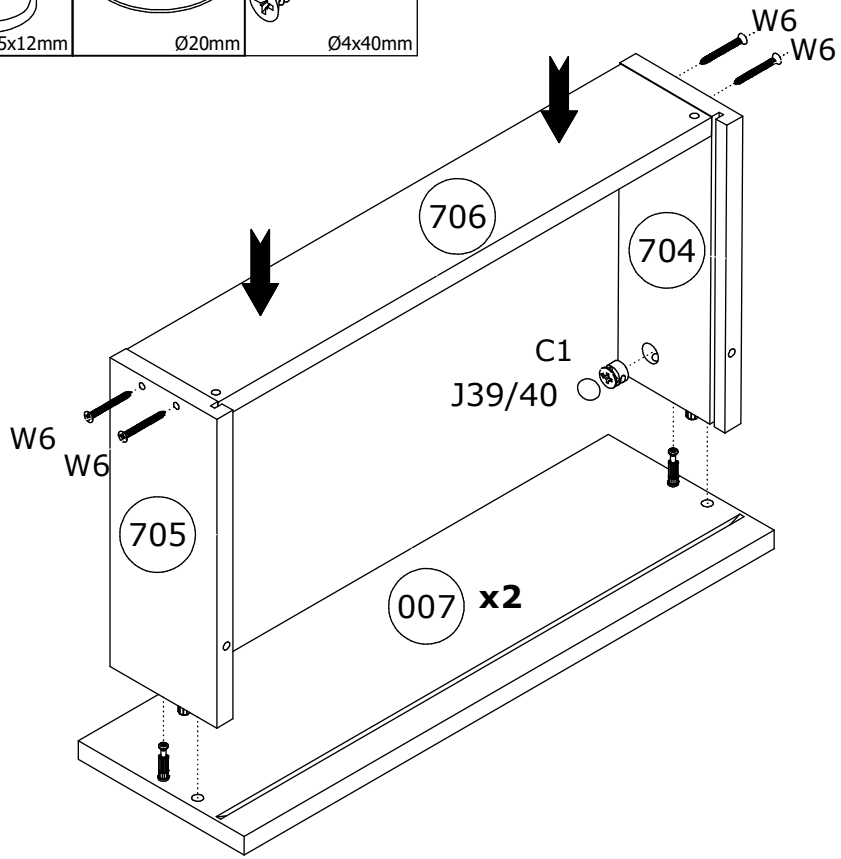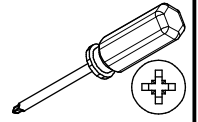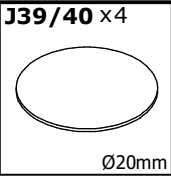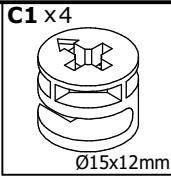





8

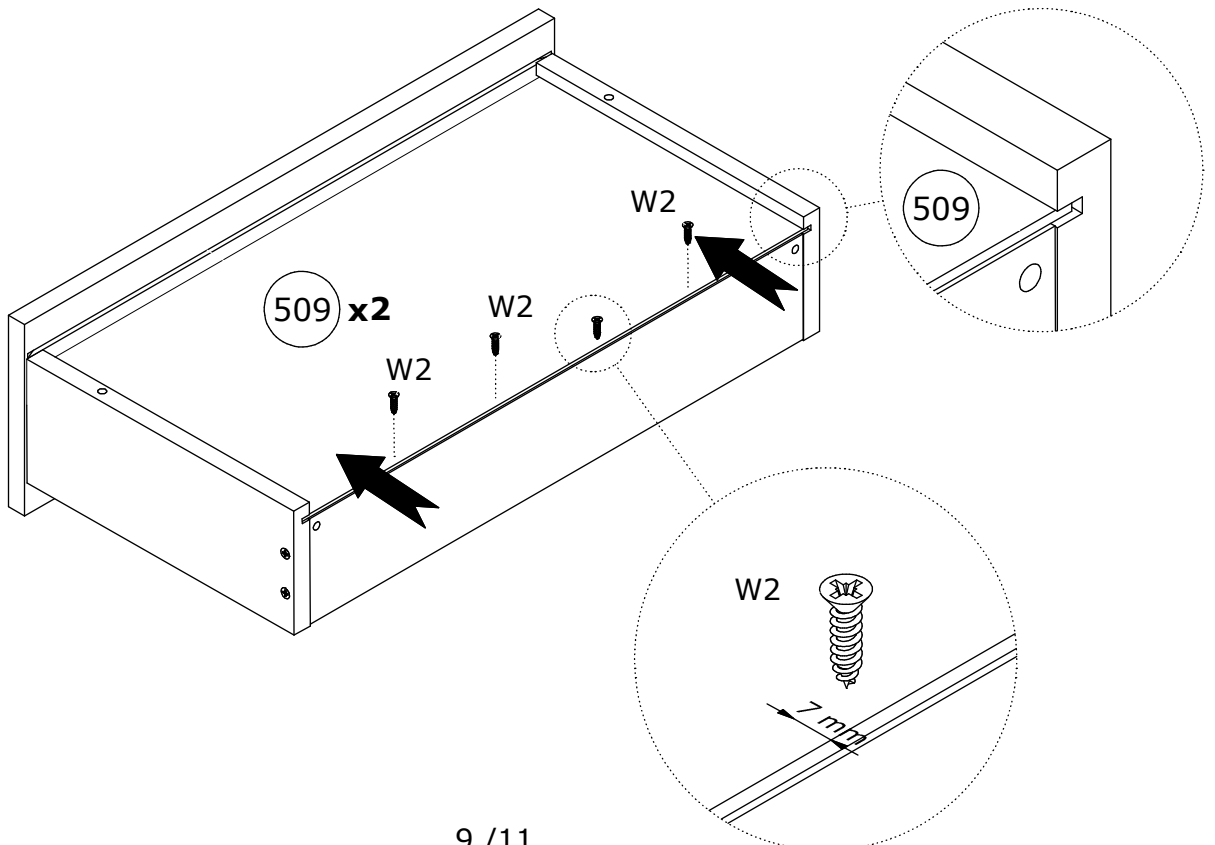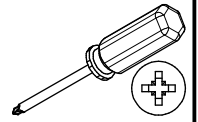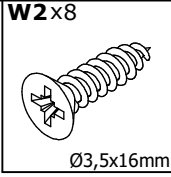

9

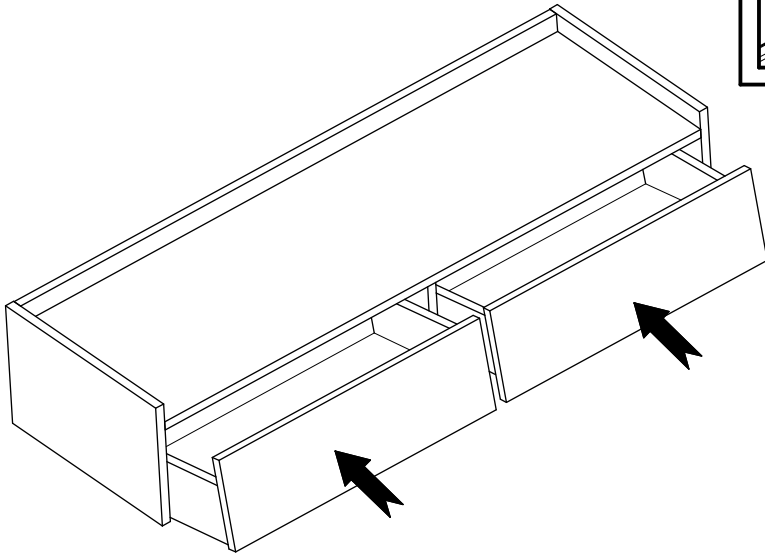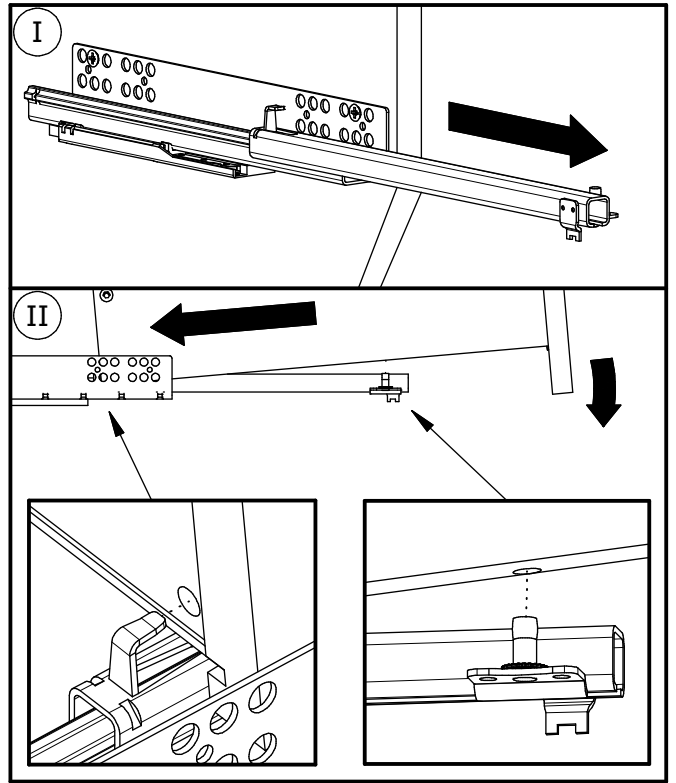


10

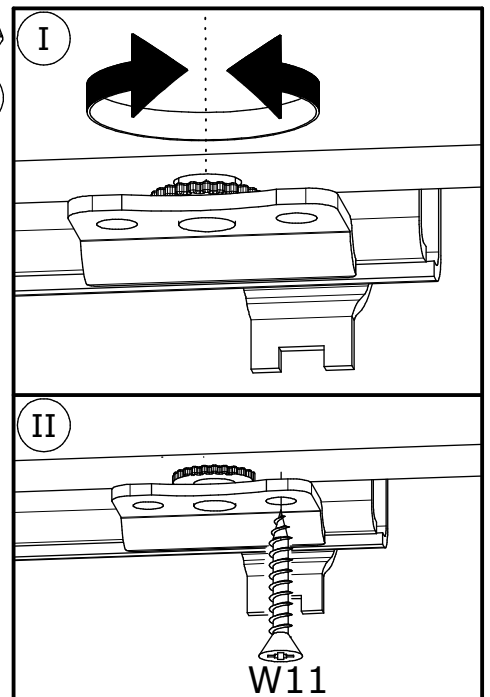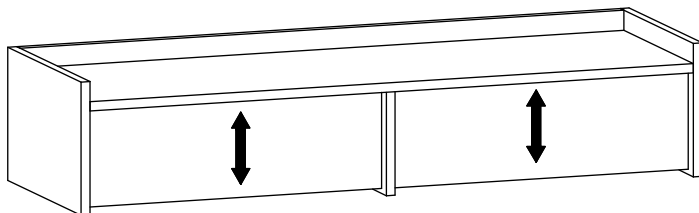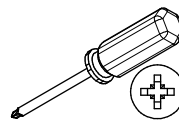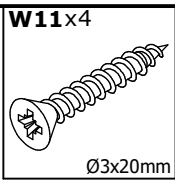


11

O4-b x4



26x22x5mm

O4-c x4

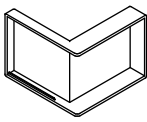

52x49x38mm

